


Раздел D

Токарные державки

Державки для наружного точения


DCLNR/L

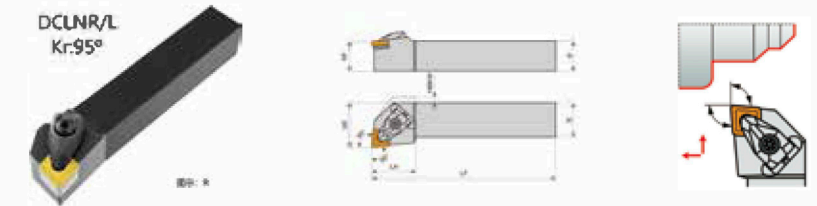

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
1616 H09	16	16	20	100	24.8	CN.. 0903..	CM5X22C	C09BM	WH30L	C1RA	SM5X8.65XA1	SPR6
2020 K09	20	20	25	125	24.8							
2525 M09	25	25	32	150	24.8							
1616 H12	16	16	20	100	32.2	CN.. 1204..	CM6×25C	C12BM	WH40L	C2RA	SM6×10XA1	SPR4
2020 K12	20	20	25	125	30							
2525 M12	25	25	32	150	30							
3225 P12	32	25	32	170	30	CN.. 1606..						
3225 P16	32	25	32	170	35							
3232 P19	32	32	40	170	40	CN.. 1906..						
4040 S19	40	40	50	250	43.4							

Державки для наружного точения


DDJNR/L

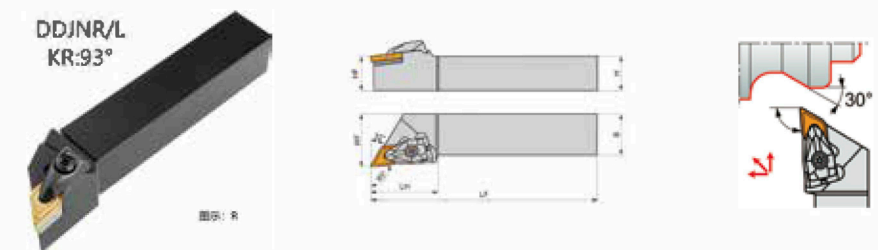

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
2020 K11	20	20	25	125	30.2	DN.. 1104..	CM5×22C	D11BM	WH30L	C1RA	SM5X8.65XA1	SPR6
2525 M11	25	25	32	150	30.2							
2020 K15	20	20	25	125	39.4	DN.. 1506..	CM6×25C	D15BM	WH40L	C2RA	SM6×10XA1	SPR4
2525 M15	25	25	32	150	39.4							
3225 P15	32	25	32	170	39.4							
3232 P15	32	32	40	170	39.4							

Державки для наружного точения


DRSNR/L

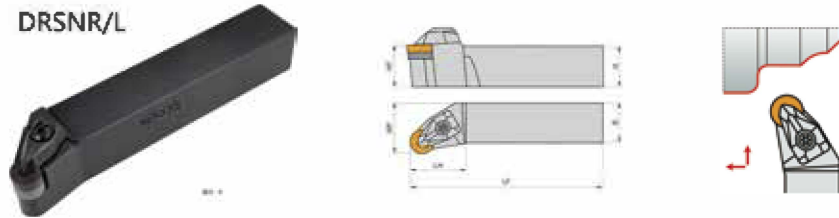

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
2525 M12	25	25	32	150	31.6	RN.. 12040..	DM6×25	WH25L	C1RD	R12BM	TM6×17	SPR4

Державки для наружного точения


DSKNR/L

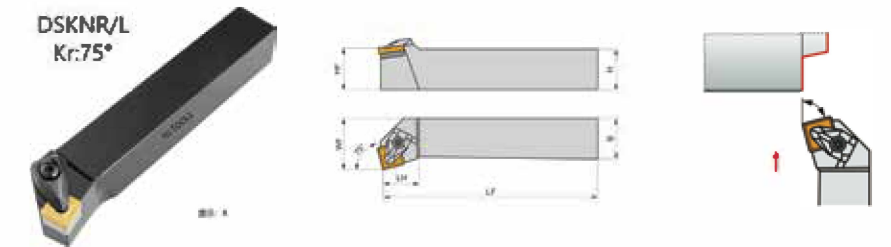

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
2525 M12	25	25	32	150	23.6	SN.. 1204..	CM6×25C	S12BM	WH40L	C2RA	SM6×10XA1	SPR4
3232 P19	32	32	40	170	32.1	SN.. 1906..	-	-	-	-	-	-

Державки для наружного точения


DSDNN

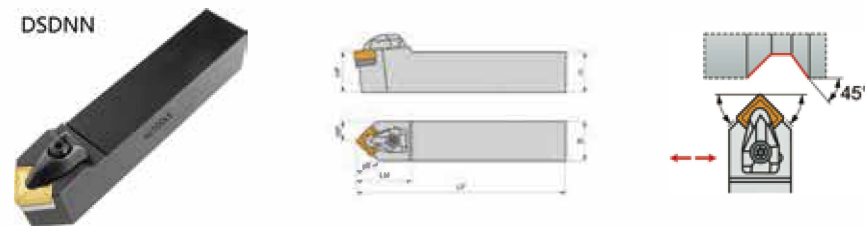

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
2525 M12	25	25	12.8	150	36.5	SN.. 1204..	CM6×25C	S12BM	WH40L	C2RA	SM6×10XA1	SPR4
2525 M15	25	25	12.8	150	44.8	SN.. 1506..		S15BM		C3RA		
3232 P19	32	32	16.5	170	49.5	SN.. 1906..	-	-	-	-	-	-
4040 S25	40	40	21	250	57.2	SN.. 2507..	-	-	-	-	-	-

Державки для наружного точения


DTGNR/L

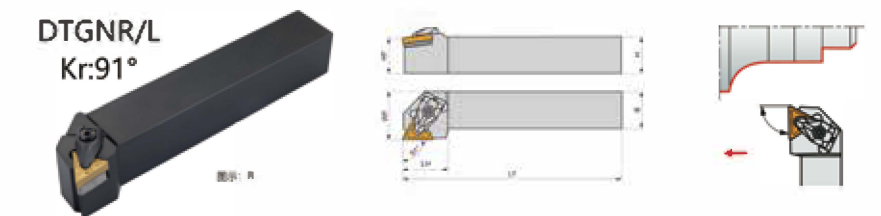

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
2020 K16	20	20	25	125	25.4	TN.. 1604..	CM5×22C	T16BM	WH30L	C1RA	SM5×8.65XA1	SPR6
2525 M16	25	25	32	150	24.6	TN.. 1604..		-				
2525 M22	25	25	32	150	32.1	TN.. 2204..	-	-	-	-	-	-
3232 P22	32	32	40	170	33.1	TN.. 2204..	-	-	-	-	-	-

Державки для наружного точения


DVJNR/L

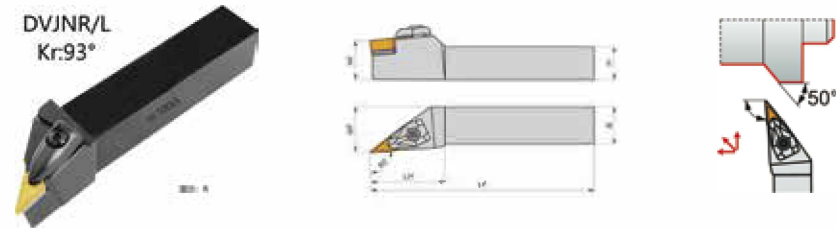

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
2020 K16	20	20	25	125	46.4	VN..1604..	CM5×22C	V16BM	WH30L	C6RA	SM5×8.65XA1	SPR6
2525 M16	25	25	32	150	46.4							
3225 P16	32	25	32	170	46.4							

Державки для наружного точения


DWLNR/L

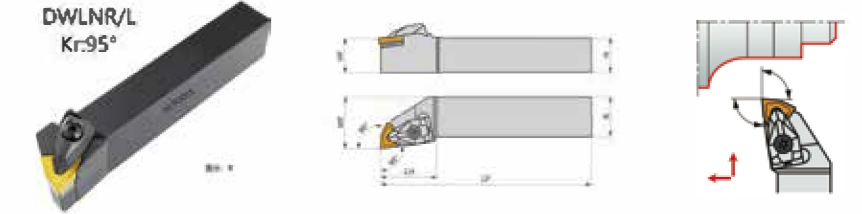

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
1616 H06	16	16	20	100	26.4	WN..0604..	CM5×22C	W06BM	WH30L	C1RA	SM5×8.65XA1	SPR6
2020 K06	20	20	25	125	27.1							
2525 M06	25	25	32	150	27.1							
2020 K08	20	20	25	125	34.3	WN..0804..	CM6×25C	W08BM	WH40L	C2RA	SM6×10XA1	SPR4
2525 M08	25	25	32	150	35							
3225 P08	32	25	32	170	35							
3225 P10	32	25	32	170	38	WN..1006..						
3232 P13	32	32	40	170	40	WN..1306..						
4040 S13	40	40	50	250	41							

Державки для наружного точения


DVPCR/L

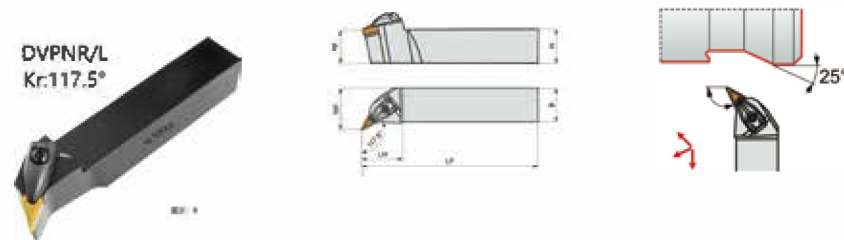

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
2525 M16	25	25	32	150	39.2	VN..1604..	CM5×22C	V16BM	WH30L	C6RA	SM5×8.65XA1	SPR6
3225 P16	32	25	32	170	39.2							

Державки для наружного точения


MTJNR/L

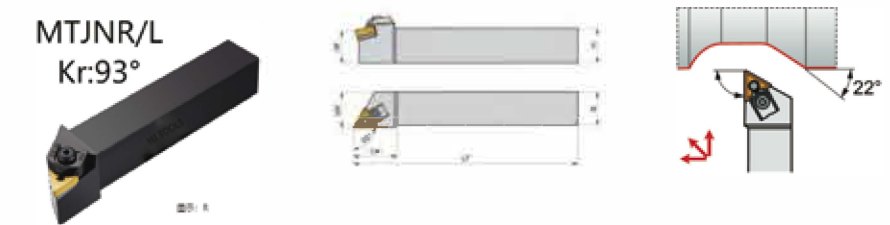

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Pin
2020 K16	20	20	25	125	34	TN..1604..	DM6×20	T16BM	WH20L	C1RD	TM5×13
2525 M16	25	25	32	150	34	TN..2204..	DM6×25	T22BM	WH25L	C1RD	TM6×17
3232 P22	32	32	40	175	42	TN..2204..	DM6×28	T22BM	WH30L	C1RD	TM6×17

Державки для наружного точения


MWLNR/L

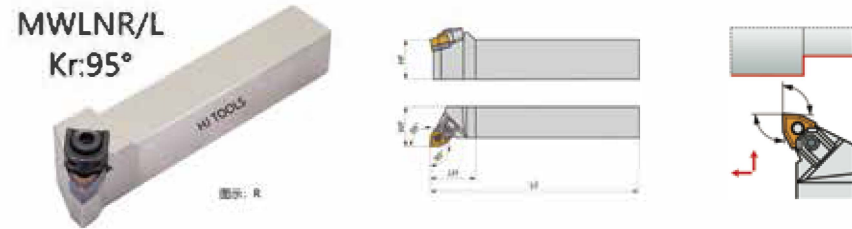

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Pin
2525 M08	25	25	32	150	32	WN.. 0804..	DM6×25	W08BM	WH25L	C1RD	TM6×17
3225 P08	32	25	32	170	DM6×28						
4040 R08	40	40	50	200	32						

Державки для наружного точения


PCLNR/L

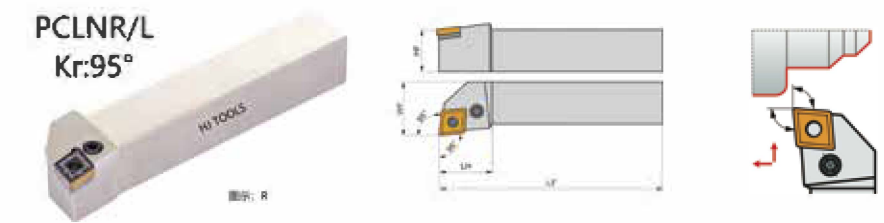

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Levers	Blocking pad
2020 K12	20	20	25	125	36	CN.. 1204..	LEM8×21	C12AP	WH30L	L4	SP4
2525 M12	25	25	32	150	36						
3225 P12	32	25	32	170	36						
3225 P16	32	25	32	170	40	CN.. 1606..	LEM8×25	C16AP	WH30L	L5	SP5
3232 P19	32	32	40	170	45	CN.. 1906..	LEM10×27	C19AP	WH40L	L6	SP6
4040 R19	40	40	50	200	45						
4040 S19	40	40	50	250	45						
4040 S25	40	40	50	250	45	CN.. 2509..	LEM12×36A	C25AP	WH50L	L8	SP8
5050 T25	50	50	60	300	50						

Державки для наружного точения


MVJNR/L

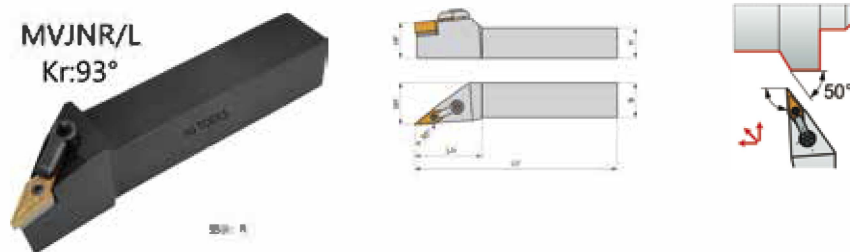

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Pin
2020 K16	20	20	25	125	41	VN.. 1604..	DM6×25	V16BM	WH20L	C3RD	TM5×13
2525 M16	25	25	32	150	41						
3225 P16	32	25	32	170	41						

Державки для наружного точения


PDJNR/L

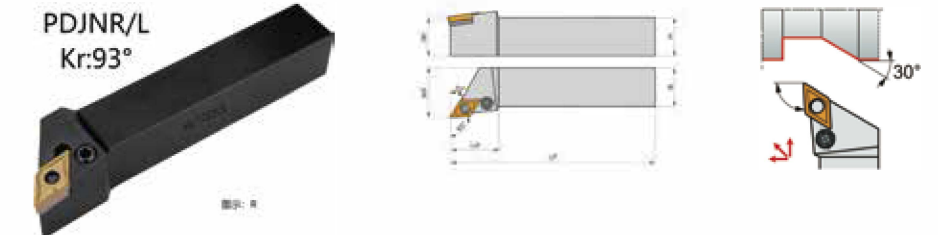

型号	H=HF	B	WF	LF	LH	Cutter	Levers	Wrench	Blocking pad	cutter pad	Screw
2020 K11	20	20	25	125	30	DN.. 1104..	L3	WH25L	SP3	D11AP	LEM6×17
2525 M11	25	25	32	150	30						
3225 P11	32	25	32	170	40						
2020 K15	20	20	32	125	40	DN.. 1506..	L4B	WH30L	SP4	D15AP	LEM8×21
2525 M15	25	25	32	150	40						
3232 P15	32	32	40	170	40						

Державки для наружного точения


PDXNR/L

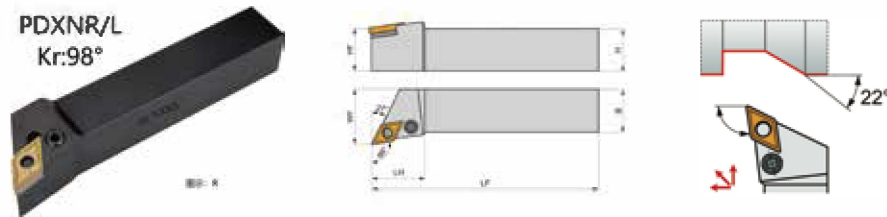

型号	H=HF	B	WF	LF	LH	Cutter	Levers	Wrench	Blocking pad	Cutter pad	Screw
2020 K15	20	20	25	125	40	DN.. 1506..	L4B	WH30L	SP4	D15AP	LEM8×21
2525 M15	25	25	32	150	40						
3225 P15	32	25	32	170	40						

Державки для наружного точения


PTGNR/L

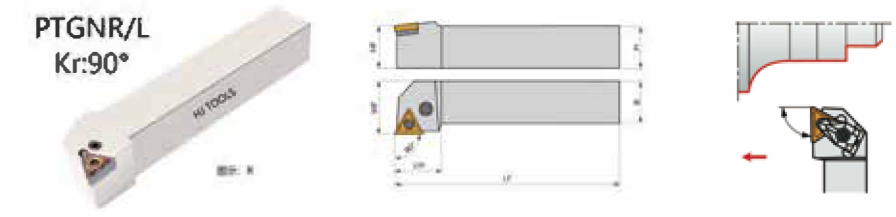

型号	H=HF	B	WF	LF	LH	Cutter	Levers	Wrench	Blocking pad	Cutter pad	Blocking pad
1616 H16	16	16	20	100	32	TN.. 1604..	L3	WH25L	SP3	T16AP	LEM6×17
2020 K16	20	20	25	125	32						
2525 M16	25	25	32	150	32						
2525 M22	25	25	32	150	32	TN.. 2204..	L4	WH30L	SP4	T22AP	LEM8X21
3225 P22	32	25	32	170	36						
3232 P22	32	32	40	170	36						
4040 R27	40	40	50	200	40	TN.. 2706..	L5	WH30L	SP5	T27AP	LEMx25

Державки для наружного точения


PRSCR/L

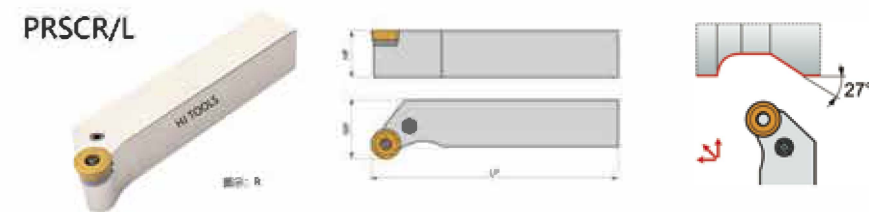

型号	H=HF	B	WF	LF	LH	Cutter	Screw	cutter pad	Wrench	Pressing plate	Pin
3225 P16	32	25	32	170		RCMX 1606MO					
3232 P20	32	32	40	170							
4040 R16	40	40	50	200							
4040 S25	40	40	50	250							

Державки для наружного точения


PTGNR/L

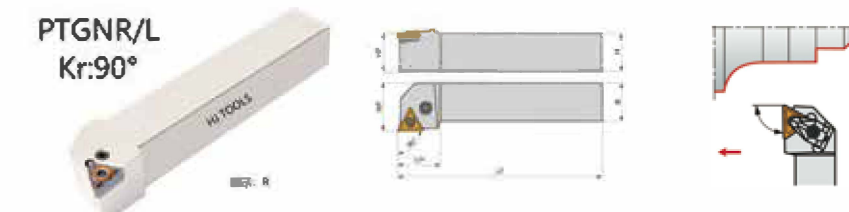

型号	H=HF	B	WF	LF	LH	Cutter	Levers	Wrench	Blocking pad	Cutter pad	Screw
1616 H16	16	16	20	100	32	TN.. 1604..	L3	WH25L	SP3	T16AP	LEM6×17
2020 K16	20	20	25	125	32						
2525 M16	25	25	32	150	32						
2525 M22	25	25	32	150	32	TN.. 2204..	L4	WH30L	SP4	T22AP	LEM8X21
3225 P22	32	25	32	170	36						
3232 P22	32	32	40	170	36						
4040 R27	40	40	50	200	40	TN.. 2706..	L5	WH30L	SP5	T27AP	LEMx25

Державки для наружного точения


PWLNR/L

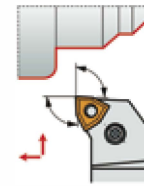

型号	H=HF	B	WF	LF	LH	Cutter	Levers	Wrench	Blocking pad	Cutter pad	Screw
1616 H06	16	16	20	100	20	WN..0604..	L3	WH25L	SP3	W06AP	LEM6×17
2020 K06	20	20	25	125	20						
2525 M06	25	25	32	150	20						
2020 K08	20	20	25	125	22	WN..0804..	L4	WH30L	SP4	W08AP	LEM8×21
2525 M08	25	25	32	150	22						
3225 P08	32	25	32	170	22						

Державки для наружного точения



SCACR/L

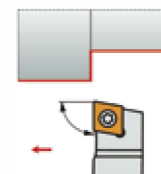

型号	H=HF	B	WF	LF	LH	Cutter	Wrench	Screw
0808 D06	08	08	8.5	60	16	CC..0602..	T07P	W60M2.5×6.5
1010 E06	10	10	10.5	70	16			
1212 F09	12	12	12.5	80	16	CC..09T3..	T15P	W60M3.5×8
1616 H09	16	16	16.5	100	16			

Державки для наружного точения



SCFCR/L

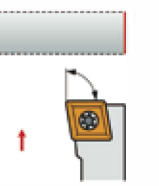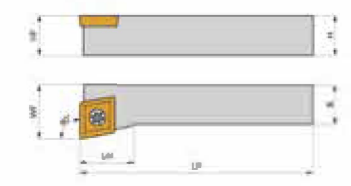

型号	H=HF	B	WF	LF	LH	Cutter	Wrench1	Wrench2	Cutter pad	Cutter pad screws	Screw
0808 D06	08	08	10	60	8	CC..0602..	-	T07P	-	-	W60M2.5×6.5
1010 E06	10	10	12	70	8						
1010 E08	10	10	12	70	13.2						
1212 F08	12	12	16	80	13.4	CC..0803..	-	-	-	-	-
1616 H08	16	16	20	100	15.2						
1212 F09	12	12	16	80	16	CC..09T3..	-	T15P	-	-	W60M3.5×8
1616 H09	16	16	20	100	16						
2020 K12	20	20	25	125	20	CC..1204..	WH40L	T15P	C12BS	SM6×10XA	W60M4×11X
2525 M12	25	25	32	150	20						

Державки для наружного точения


SDJCR/L

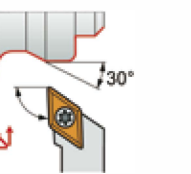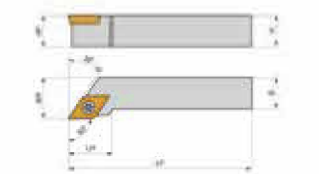

型号	H=HF	B	WF	LF	LH	Cutter	Levers	Wrench1	Wrench2	Cutter pad	Cutter pad screws
0808 D07	08	08	10	60	14	DC..0702..	W60M2.5×6.5	T07P	-	-	-
1010 E07	10	10	12	70	14						
1212 F07	12	12	16	80	14						
1212 F11	12	12	16	80	20	DC..11T3..	W60M3.5×8	T15P	-	-	-
1616 H11	16	16	20	100	20						
2020 K11	20	20	25	125	20						
2525 M11	25	25	32	150	20						
2525 M15	25	25	32	150	28	DC..1504..	W60M3.5×12	T15P	WH35L	D11BS	SM5×8.65XA

Державки для наружного точения


SRDCN

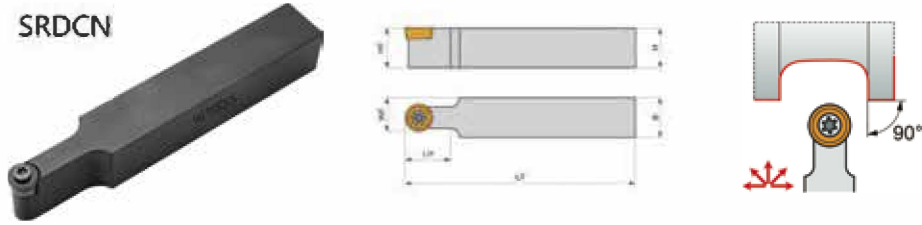

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Wrench	Blocking pad	Cutter pad	Cutter pad Screws
1212 F06	12	12	09	80	12	RC..0602MO..					
1616 H06	16	16	11	100	12						
2020 K08	20	20	14	125	20	RC..0803MO..	W60M3×7	T10P			
2020 K10	20	20	15	125	25	RC..10T3MO..	W60M3.5×10	T15P			
2525 M10	25	25	17.5	150	25						
3225 P10	32	25	17.5	170	25	RC..1204MO..	W60M3.5×12	T15P	WH35L	R12BS	SM5×8.65XA
2525 M12	25	25	18.5	150	30						
3225 P12	32	25	18.5	170	30	RC..1606MO..	W60M4×15X	T15P	WH40L	R16BS	SM6×10XA
3225 P16	32	25	20.5	170	32						

Державки для наружного точения


SRSCR/L

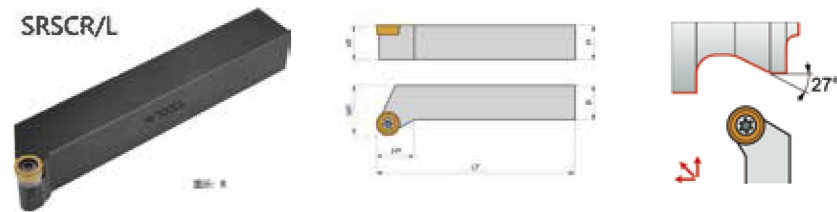

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Wrench1	Wrench2	Cutter pad	Cutter pad Screws
1212 F06	12	12	09	80	12	RC..0602MO..					
1616 H06	16	16	11	100	12						
2020 K08	20	20	25	125	20	RC..0803MO..	W60M3×7	T10P			
2020 K10	20	20	25	125	20	RC..10T3MO..	W60M3.5×10	T15P			
2525 M10	25	25	32	150	20						
3225 P10	32	25	32	170	20	RC..1204MO..	W60M3.5×12	T15P	WH35L	R12BS	SM5×8.65XA
2525 M12	25	25	32	150	20						
3225 P12	32	25	32	170	20	RC..1606MO..	W60M4×15X	T15P	WH40L	R16BS	SM6×10XA
3225 P16	32	25	32	170	20						

Державки для наружного точения

STJCR/L

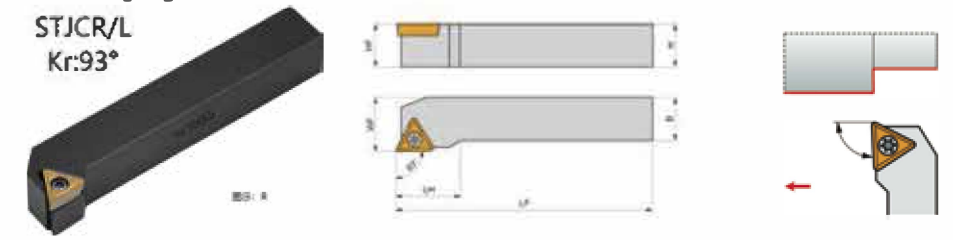

型号	H=HF	B	WF	LF	LH	Cutter	Wrench	Cutter pad	Cutter pad Screws	Screw
1616 H11	16	16	20	100	18	TC..1102..	T07P	-	-	W60M2.5×6.5
2020 K16	20	20	25	125	25	TC..16T3..	T15P	T16BS	SM5×8.65XA	W60M3.5×12
2525 M16	25	25	32	150	25					

Державки для наружного точения

SVHB(C) R/L




型号	H=HF	B	WF	LF	LH	Cutter	Wrench1	Wrench2	Cutter pad	Cutter pad Screws	Screw
1616 H11	16	16	20	100	14	Vb..1103..	T07P	-	-	-	W60M2.5×6.5
2020 K16	20	20	25	125	20	VB..1604..	T15P	WH35L	V16BS	SM5×8.65XA	W60M3.5×12
2525 M16	25	25	32	150	20						
1616 H11	16	16	20	100	14	VC..1103..	T07P	-	-	-	W60M2.5×6.5
2020 K16	20	20	25	125	20	VC..1604..	T15P	WH35L	V16BSC	SM5×8.65XA	W60M3.5×12
2525 M16	25	25	32	150	20						

注意VB VC 刀片后角不同 刀垫会不同 刀杆刀片槽角度不同

Державки для наружного точения


SRDCN

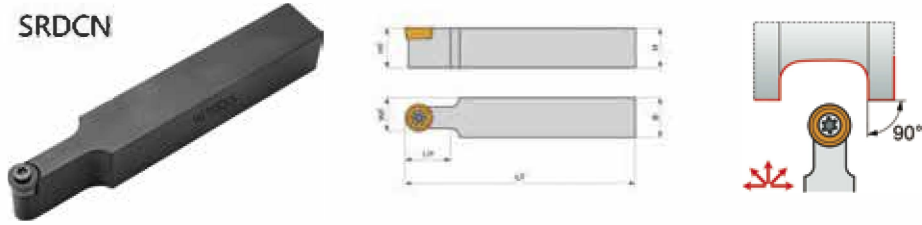

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Wrench1	Blocking pad	Cutter pad	Cutter pad Screws
1212 F06	12	12	09	80	12	RC..0602MO..					
1616 H06	16	16	11	100	12						
2020 K08	20	20	14	125	20	RC..0803MO..	W60M3×7	T10P			
2020 K10	20	20	15	125	25	RC..10T3MO..	W60M3.5×10	T15P			
2525 M10	25	25	17.5	150	25						
3225 P10	32	25	17.5	170	25	RC..1204MO..	W60M3.5×12	T15P	WH35L	R12BS	SM5×8.65XA
2525 M12	25	25	18.5	150	30						
3225 P12	32	25	18.5	170	30	RC..1606MO..	W60M4×15X	T15P	WH40L	R16BS	SM6×10XA
3225 P16	32	25	20.5	170	32						

Державки для наружного точения


SRSCR/L

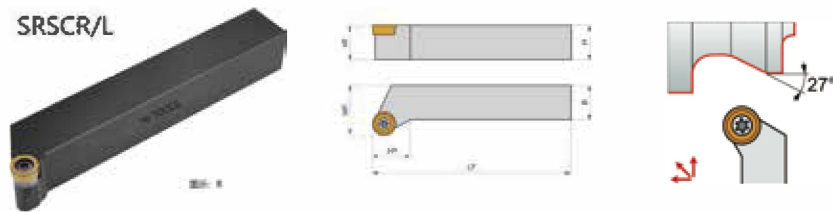

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Wrench1	Wrench2	Cutter pad	Cutter pad Screws
1212 F06	12	12	09	80	12	RC..0602MO..					
1616 H06	16	16	11	100	12						
2020 K08	20	20	25	125	20	RC..0803MO..	W60M3×7	T10P			
2020 K10	20	20	25	125	20	RC..10T3MO..	W60M3.5×10	T15P			
2525 M10	25	25	32	150	20						
3225 P10	32	25	32	170	20	RC..1204MO..	W60M3.5×12	T15P	WH35L	R12BS	SM5×8.65XA
2525 M12	25	25	32	150	20						
3225 P12	32	25	32	170	20	RC..1606MO..	W60M4×15X	T15P	WH40L	R16BS	SM6×10XA
3225 P16	32	25	32	170	20						

Державки для наружного точения


STJCR/L

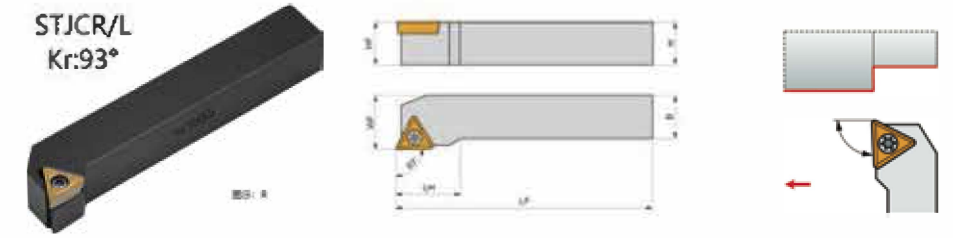

型号	H=HF	B	WF	LF	LH	Cutter	Wrench	Cutter pad	Cutter pad Screws	Screw
1616 H11	16	16	20	100	18	TC..1102..	T07P	-	-	W60M2.5×6.5
2020 K16	20	20	25	125	25	TC..16T3..	T15P	T16BS	SM5×8.65XA	W60M3.5×12
2525 M16	25	25	32	150	25					

Державки для наружного точения

SVHB(C) R/L

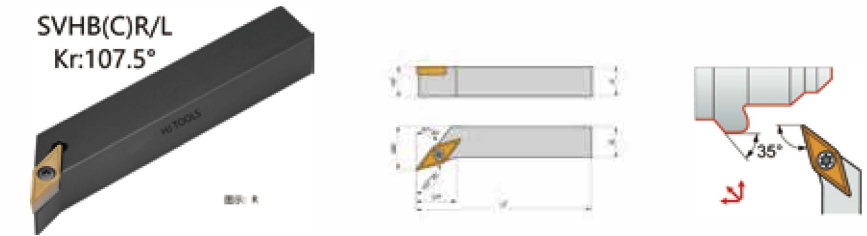


型号	H=HF	B	WF	LF	LH	Cutter	Wrench1	Wrench2	Cutter pad	Cutter pad Screws	Screw
1616 H11	16	16	20	100	14						
2020 K16	20	20	25	125	20						
2525 M16	25	25	32	150	20						
1616 H11	16	16	20	100	14						
2020 K16	20	20	25	125	20						
2525 M16	25	25	32	150	20						

注意VB VC 刀片后角不同 刀垫会不同 刀杆刀片槽角度不同

Державки для наружного точения


DVJNR/L

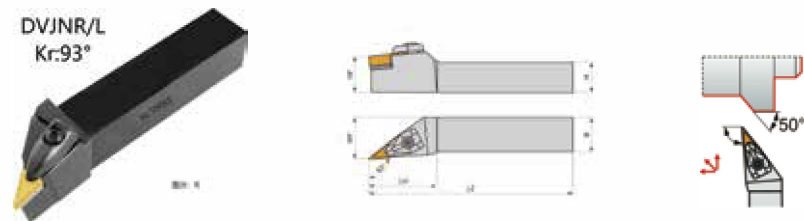

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
2020 K16	20	20	25	125	46.4	VN..1604..	CM5×22C	V16BM	WH30L	C6RA	SM5×8.65XA1	SPR6
2525 M16	25	25	32	150	46.4							
3225 P16	32	25	32	170	46.4							

Державки для наружного точения


DWLNR/L

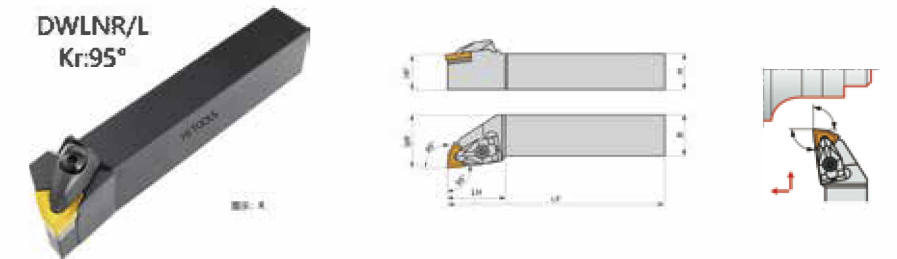

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
1616 H06	16	16	20	100	26.4	WN..0604..	CM5×22C	W06BM	WH30L	C1RA	SM5×8.65XA1	SPR6
2020 K06	20	20	25	125	27.1							
2525 M06	25	25	32	150	27.1							
2020 K08	20	20	25	125	34.3	WN..0804..	CM6×25C	W06BM	WH30L	C1RA	SM6×10XA1	SPR4
2525 M08	25	25	32	150	35							
3225 P08	32	25	32	170	35	WN..1006..						
3225 P10	32	25	32	170	38							
3232 P13	32	32	40	170	40	WN..1306..						
4040 S13	40	40	50	250	41							

Державки для наружного точения


DVPCR/L

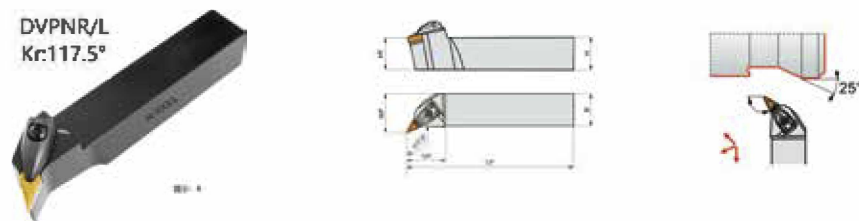

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws	Spring
2525 M16	25	25	32	150	39.2	VN..1604..	CM5×22C	C6RA	WH30L	WH30L	SM5×8.65XA1	SPR6
3225 P16	32	25	32	170	39.2							

Державки для наружного точения


MTJNR/L

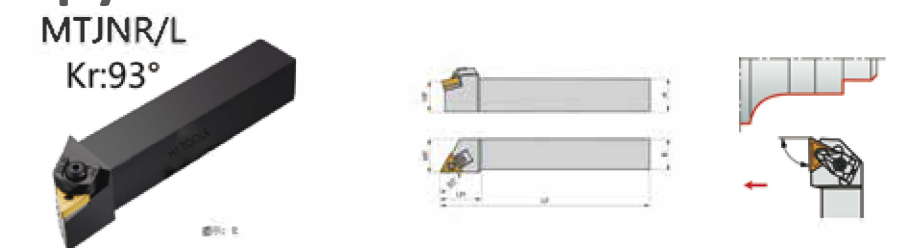

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Pin
2020 K16	20	20	25	125	34	TN..1604..	CM5×22C	T16BM	WH30L	C1RD	TM5×13
2525 M16	25	25	32	150	34	TN..2204..	CM5×25C	T22BM	WH25L		TM6×17
3232 P22	32	32	40	170	42		CM5×25C	T22BM	WH25L		TM6×17

Державки для наружного точения


MWLNR/L

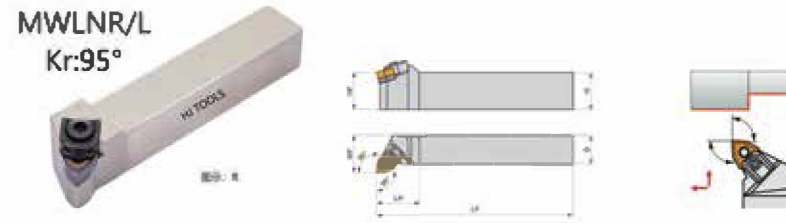

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Pin
2525 M08	25	25	32	C	32	WN.. 0804..	DM6×25	W08BM	WH25L	C1RD	TM6×17
3225 P08	32	25	32	170	DM6×25						
4040 R08	40	40	50	200	32						

Державки для наружного точения


MVJNR/L

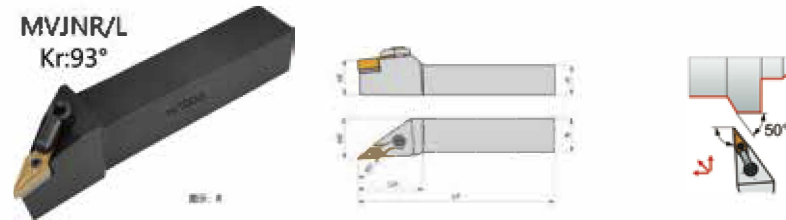

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Pin
2020 K16	20	20	25	125	41	VN.. 1604..	DM6×25	V16BM	WH20L	C3RD	TM5×13
2525 M16	25	25	32	150	41						
3225 P16	32	25	32	170	41						

Державки для наружного точения


PCLNR/L

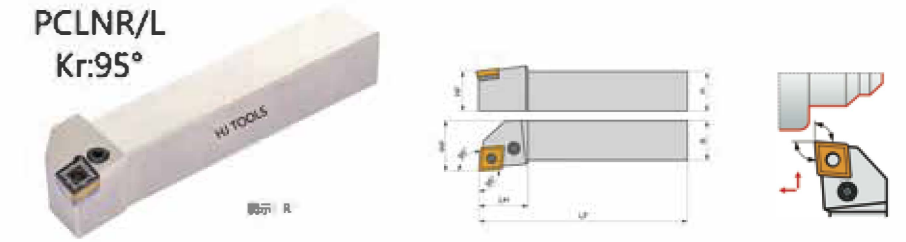

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws
2020 K12	20	20	25	125	36	CN.. 1204..	LEM8×21	C12AP	WH30L	L4	SP4
2525 M12	25	25	32	150	36						
3225 P12	32	25	32	170	36						
3225 P16	32	25	32	170	40	CN.. 1606..	LEM8×21	C16AP	WH30L	L4	SP5
3232 P19	32	32	40	170	45	CN.. 1906..	LEM10×27	C19AP	WH40L	L6	SP6
4040 R19	40	40	50	200	45						
4040 S19	40	40	50	250	45						
4040 S25	40	40	50	250	45	CN.. 1906..	LEM12×36A	C25AP	WH50L	L8	SP8
5050 T25	50	50	60	300	50						

Державки для наружного точения


PDJNR/L

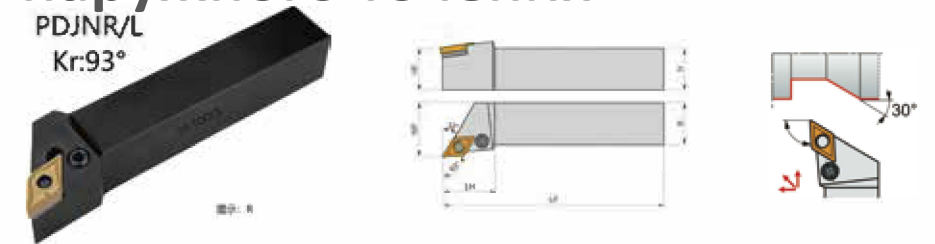

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	levers	Pressing plate
2020 K11	20	20	25	125	30	DN.. 1104..	LEM6×17	D11AP	WH25L	L3	SP8
2525 M11	25	25	32	150	30						
3225 P11	32	25	32	170	40						
2020 K15	20	20	32	125	40	DN.. 1506..	LEM8×21	D15AP	WH30L	L4B	SP4
2525 M15	25	25	32	150	40						
3232 P15	32	32	40	170	40						

Державки для наружного точения


PDXNR/L

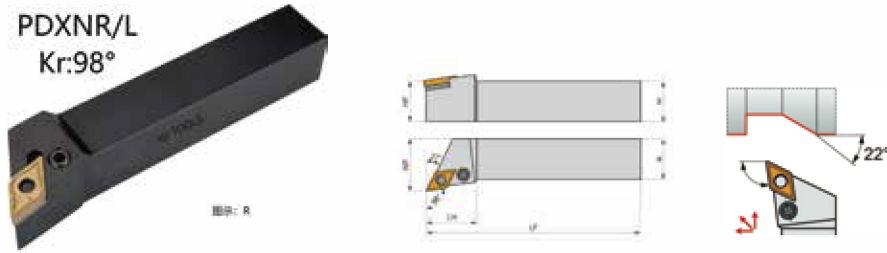

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Pin
2020 K15	20	20	25	125	40	DN..1506..	LEM8×21	D15AP	WH30L	L4B	s, SP4
2525 M15	25	25	32	150	40						
3225 P15	32	25	32	170	40						

Державки для наружного точения


PWLNR/L

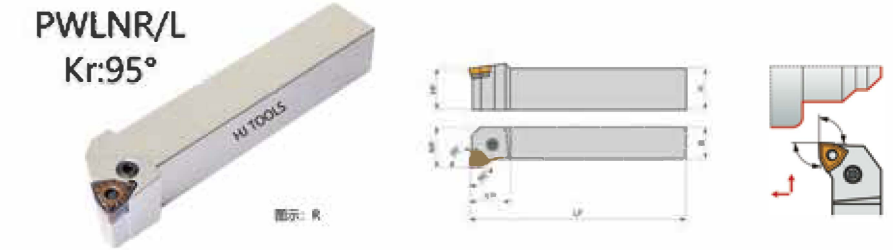

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws
1616 H06	16	16	20	100	20	WN..0604..	LEM6×17	W06AP	WH25L	L3	SP3
2020 K06	20	20	25	125	20						
2525 M06	25	25	32	150	20						
2020 K08	20	20	25	125	22	WN..0804..	LEM8X21	W08AP	WH30L	L8	SP8
2525 M08	25	25	32	150	22						
3225 P08	32	25	32	170	22						

Державки для наружного точения


PTGNR/L

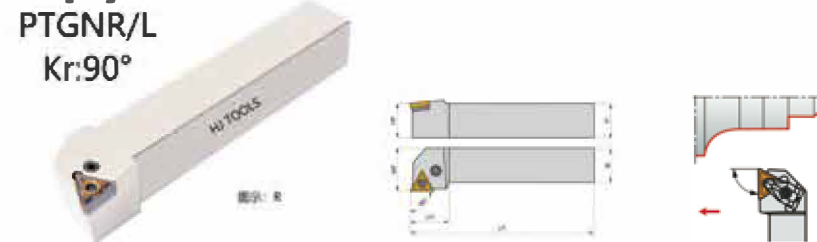

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Blocking pad
1616 H16	16	16	20	100	32	TN..1604..	LEM6×17	T16AP	WH25L	L3	SP3
2020 K16	20	20	25	125	32						
2525 M16	25	25	32	150	32						
2525 M22	25	25	32	150	32	TN..2204..	LEM6×17	T22AP	WH30L	L4	SP4
3225 P22	32	25	32	170	36						
3232 P22	32	32	40	170	36						
4040 R27	40	40	50	200	40	TN..2706..	LEMx25	T27AP	WH30L	L5	SP4

Державки для наружного точения


SCACR/L

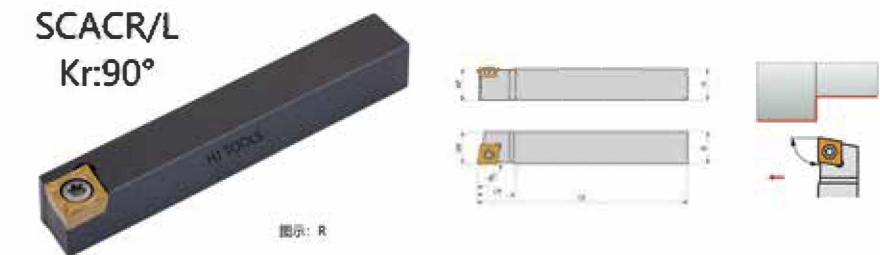

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Wrench
0808 D06	08	08	8.5	60	16	CC..0602..	W60M2.5×6.5	T07P
1010 E06	10	10	10.5	70	16			
1212 F09	12	12	12.5	80	16	CC..09T3..	W60M3.5×8	T15P
1616 H09	16	16	16.5	100	16			

Державки для наружного точения


SCFCR/L

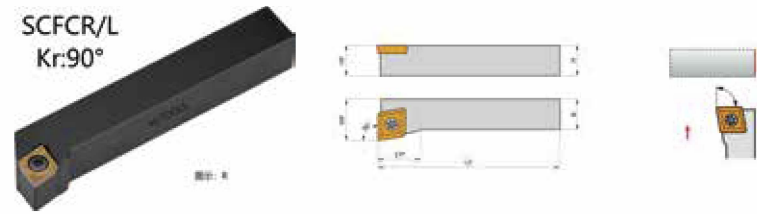

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Wrench
0808 D06	08	08	10	60	8	CC..0602..	W60M25×6.5	T07P
1010 E06	10	10	12	70	8			
1212 F09	12	12	16	80	16	CC..09T3..	W60M3.5×8	T15P
1616 H09	16	16	20	100	16			

Державки для наружного точения


SCLCR/L

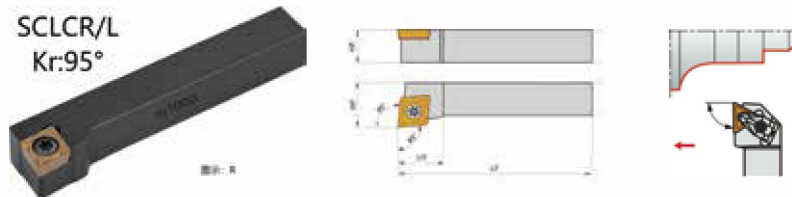

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
0808 D06	08	08	10	60	8	CC..0602..	W60M25×6.5	-	-	T07P	-
1010 E06	10	10	12	70	8						
1010 E08	10	10	12	70	13.2	CC..0803..	-	-	-	-	-
1212 F08	12	12	16	80	13.4						
1616 H08	16	16	20	100	15.2						
1212 F09	12	12	16	80	16	CC..09T3..	W60M3.5×8	-	-	T15P	-
1616 H09	16	16	20	100	16						
2020 K12	20	20	25	125	20	CC..1204..	W60M4×11X	C12BS	WH40L	T15P	SM6×10XA
2525 M12	25	25	32	150	20						

Державки для наружного точения


SDJCR/L

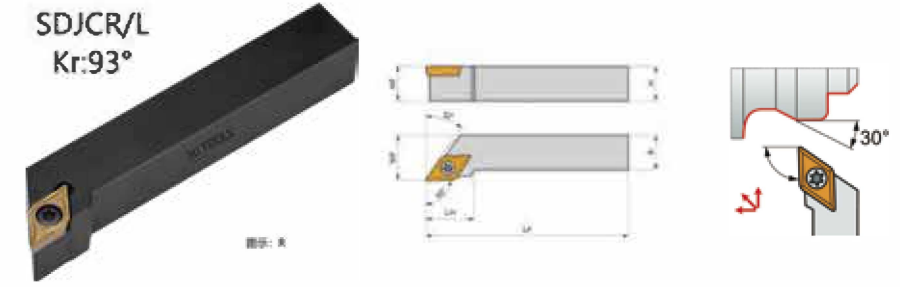

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Pressing plate	Cutter pad screws
0808 D07	08	08	10	60	14	DC..0702..	W60M2.5×6.5	-	-	T07P	-
1010 E07	10	10	12	70	14						
1212 F07	12	12	16	80	14						
1212 F11	12	12	16	80	20	DC..11T3..	W60M3.5×8	-	-	T15P	-
1616 H11	16	16	20	100	20						
2020 K11	20	20	25	125	20						
2525 M11	25	25	32	150	20	DC..1504..	W60M3.5×12	D11BS	WH35L	T15P	SM5×8.65XA
2525 M15	25	25	32	150	28						

Державки для наружного точения


SRDCN

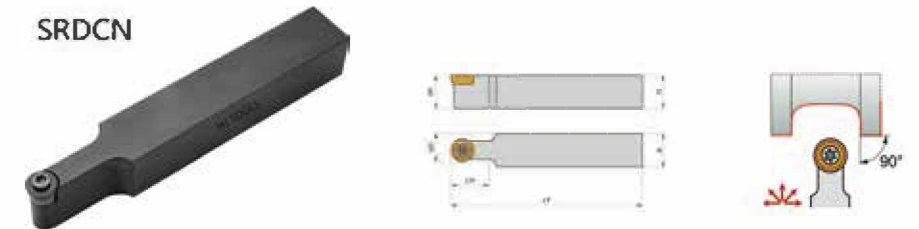

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
1212 F06	12	12	09	80	12	RC..0602MO..	-	-	-	-	-
1616 H06	16	16	11	100	12						
2020 K08	20	20	14	125	20	RC..0803MO..	W60M3×7	-	-	T10P	-
2020 K10	20	20	15	125	25						
2525 M10	25	25	17.5	150	25	RC..10T3MO..	W60M3.5×10	-	-	T15P	-
3225 P10	32	25	17.5	170	25						
2525 M12	25	25	18.5	150	30	RC..1204MO..	W60M3.5×12	R12BS	WH35L	T15P	SM5×8.65XA
3225 P12	32	25	18.5	170	30						
3225 P16	32	25	20.5	170	32	RC..1606MO..	W60M4×15X	R16BS	WH40L	T15P	SM6×10XA

Державки для наружного точения


SRSCR/L

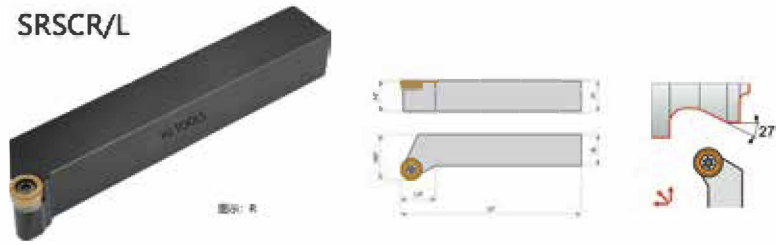

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
1212 F06	12	12	09	80	12	RC..0602MO..	-	-	-	-	-
1616 H06	16	16	11	100	12	RC..0803MO..	W60M3×7	-	-	T10P	-
2020 K08	20	20	25	125	20	RC..10T3MO..	W60M3.5×10	-	-	T15P	-
2020 K10	20	20	25	125	20	RC..1204MO..	W60M3.5×12	R12BS	WH35L	T15P	SM5×8.65XA
2525 M10	25	25	32	150	20	RC..1606MO..	W60M4×15X	R16BS	WH40L	T15P	SM6×10XA
3225 P10	32	25	32	170	20						
2525 M12	25	25	32	150	20						
3225 P12	32	25	32	170	20						
3225 P16	32	25	32	170	20						

Державки для наружного точения


STJCR/L

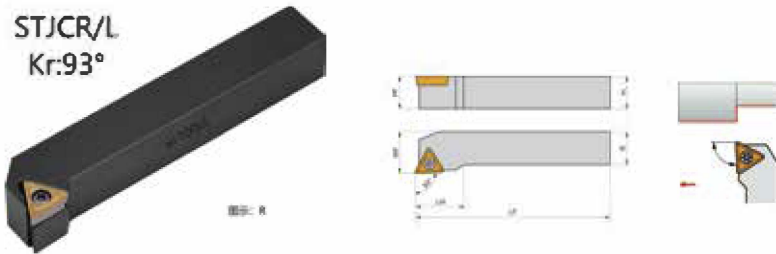

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench	Cutter pad screws
1616 H11	16	16	20	100	18	TC..1102..	W60M2.5×6.5	-	T07P	-
2020 K16	20	20	25	125	25	TC..16T3..	LEM6×17	T16BS	T15P	SM5×8.65XA
2525 M16	25	25	32	150	25					

Державки для наружного точения


SVHBR/L

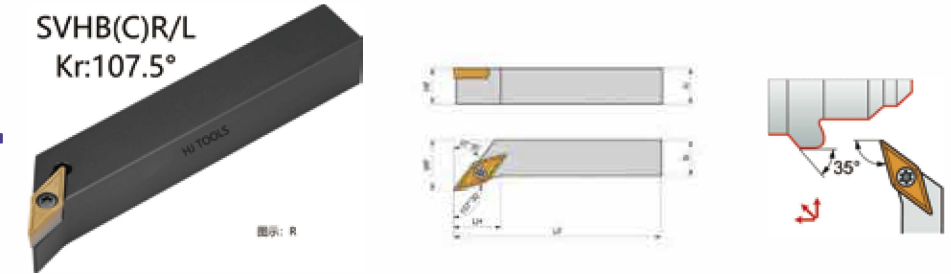

型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
1616 H11	16	16	20	100	14	VB..1103..	W60M2.5×6.5	-	-	T07P	-
2020 K16	20	20	25	125	20	VB..1604..	W60M3.5×12	V16BS	WH35L	T15P	SM5×8.65XA
2525 M16	25	25	32	150	20						

Державки для наружного точения

SVHCR/L

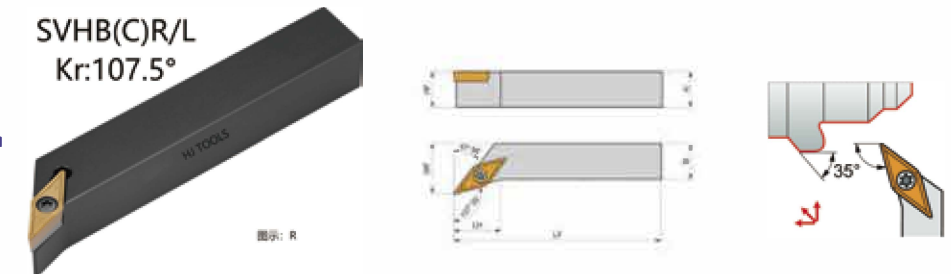


型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
1616 H11	16	16	20	100	14	VC..1103..	W60M2.5×6.5	-	-	T07P	-
2020 K16	20	20	25	125	20	VC..1604..	W60M3.5×12	V16BS	WH35L	T15P	SM5×8.65XA
2525 M16	25	25	32	150	20						

Державки для наружного точения

SVJCR/L

SVJB(C)R/L
Kr:93°

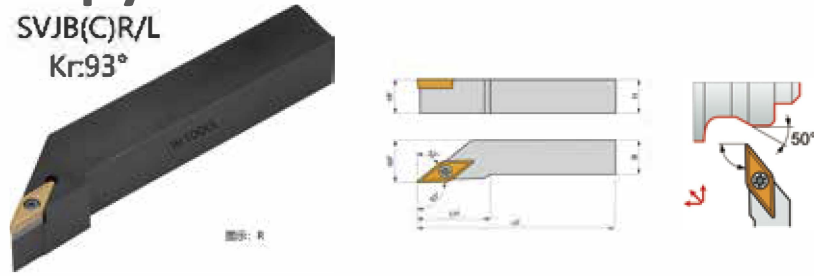


型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
1212 F11	12	12	16	80	20	VB..1103..	W60M2.5×6.5	-	-	T07P	-
1616 H11	16	16	20	100	20						
1212 N13	12	12	16	160	27	VC..1303..					
1616 H13	16	16	20	100	30						
2020 K13	20	20	25	125	30						
2525 M13	25	25	32	150	30						
2020 K16	20	20	25	125	28	VC..1604..	W60M3.5×12	V16BSC	WH35L	T15P	SM5×8.65XA
2525 M16	25	25	32	150	32						
3225 P16	32	25	32	170	32						

Державки для наружного точения

SWLCR/L

SWLCR/L
Kr:95°

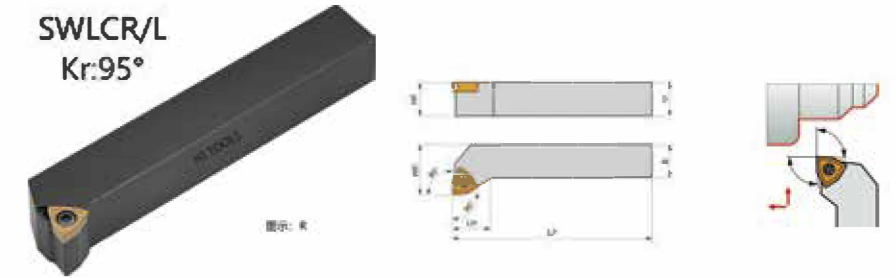


型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
1616 H11	16	16	20	100	14	WC..06T3..	W60M3×7	-	-	T10P	-
2020 K16	20	20	25	125	20						
2525 M16	25	25	32	150	20	WC..0804..	W60M3.5×12	-	-	T15P	-

Державки для наружного точения

SVJBR/L

SVJB(C)R/L
Kr:93°

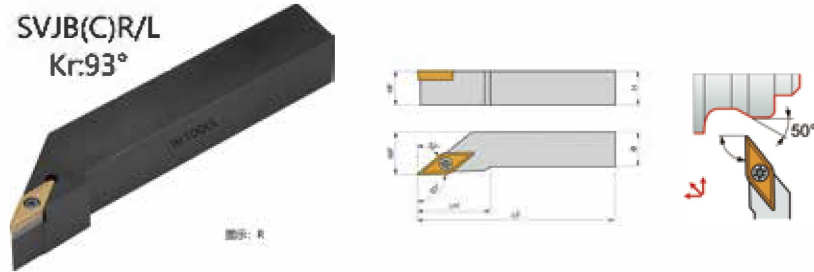


型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
1212 F11	12	12	16	80	20	VB..1103..	W60M2.5×6.5	-	-	T07P	-
1616 H11	16	16	20	100	20						
2020 K16	20	20	25	125	28	VC..1604..	W60M3.5×12	V16BSC	WH35L	T15P	SM5×8.65XA
2525 M16	25	25	32	150	32						
3225 P16	32	25	32	170	32						

Державки для наружного точения

SSDCN

SSDCN

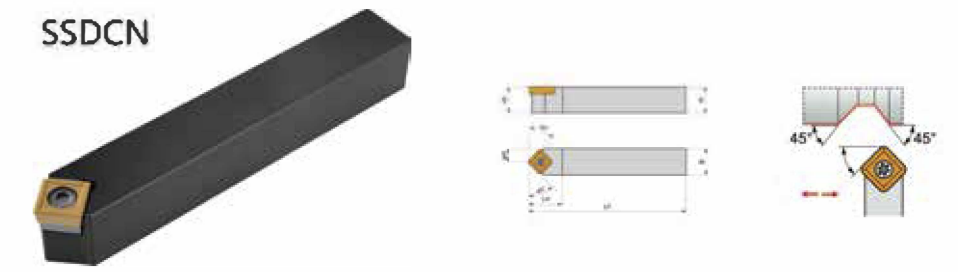


型号	H=HF	B	WF	LF	LH	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
1212 F09	12	12	6	80	16	SC..09T3..	W60M2.5×6.5	S09BS	WH35L	T15P	W60M3.5×8
1616 H09	16	16	8	100	16		W60M3.5×12				W60M3.5×12
2020 K12	20	20	10	125	20	SC..1204..	W60M4×11X	S12BS	WH40L	T15P	SM6×10XA
2525 M12	25	25	12.5	150	20						

Державки для внутреннего точения

PWLNR/L

PWLNR/L
Kr:95°

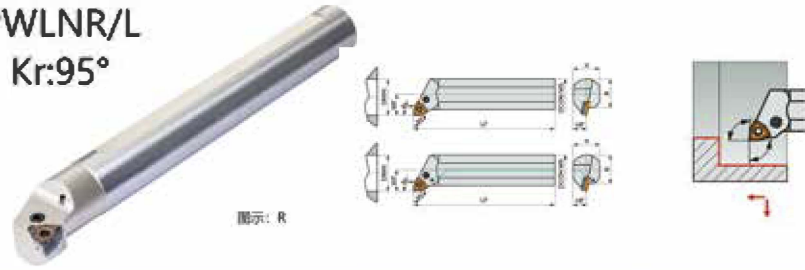


型号	DCON	DMIN	WF	H	B	LF	Cutter	Screw	Cutter pad	Wrench	Blocking pad	Levers
A16M-PWLNR/L 06	16	20	11	15	15	150	WN..0604..	LEM5X12	-	WH20L	-	L3D
A20Q-PWLNR/L 06	20	27	13	18	18	180	WN..0604..					L3B
A32S-PWLNR/L 06	32	40	22	30	30	250	WN..0604..					
A25R-PWLNR/L 08	25	32	17	23	23	200	WN..0804..	LEM6X14	-	WH25L	-	L4A
A32S-PWLNR/L 08	32	40	22	30	30	250	WN..0804..	LEM6X14	SP4	WH30L	W08AP	L4
A40T-PWLNR/L 08	40	50	27	38	38	300	WN..0804..					
A50U-PWLNR/L 08	50	63	35	47	48.5	350	WN..0804..					
A60V-PWLNR/L 08	60	80	43	57	58.5	400	WN..0804..					

Державки для внутреннего точения

SDQCR/L

SDQCR/L
Kr:107.5°

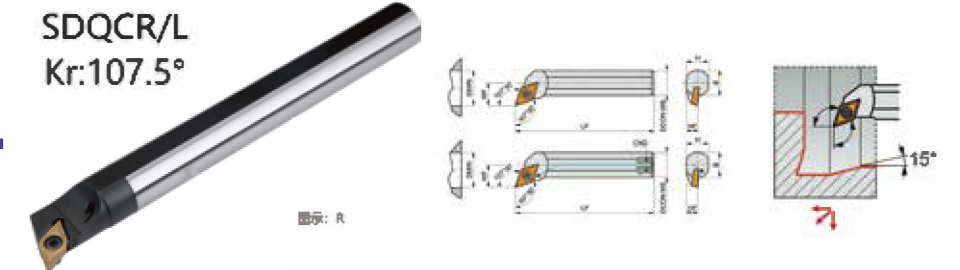


型号	DCON	DMIN	WF	H	B	LF	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
A10H-SDQCR/L 07	10	13	7	9	-	100	DC..0702..	W60M2.5x5.5	-	-	T07P	-
A12K-SDQCR/L 07	12	16	9	11	-	125	DC..0702..	W60M2.5x6.5				
A16M-SDQCR/L 07	16	20	11	14.5	-	150	DC..0702..	W60M2.5x6.5				
A20Q-SDQCR/L 11	20	25	13	18	-	180	DC..11T3..	W60M3.5x8	-	-	T15P	-
A25R-SDQCR/L 11	25	32	17	23	23	200	DC..11T3..	W60M3.5x10				
A32S-SDQCR/L 11	32	40	22	30	30	250	DC..11T3..					

Державки для внутреннего точения

SCLCR/L

SCLCR/L
Kr:95°

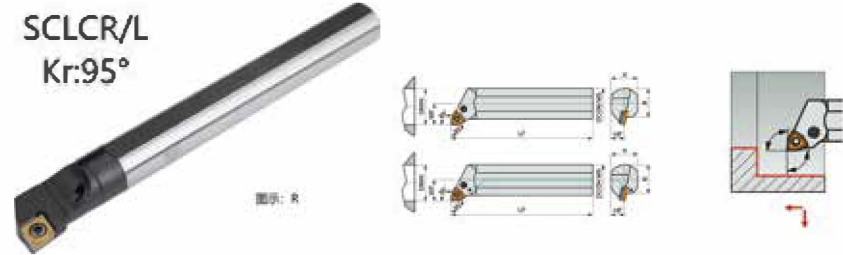


型号	DCON	DMIN	WF	H	B	LF	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
A08H-SCLCR/L 06	8	11	6	7.2	7.6	100	CC..0602..	W60M2.5x5.5	-	-	T07P	-
A10H-SCLCR/L 06	10	13	7	9	-	100	CC..0602..					
A12K-SCLCR/L 06	12	16	9	11	-	125	CC..0602..					
A10K-SCLCR/L 08	10	12	6	9	9.5	125	CC..0803..	W60M3.5x8	-	-	T15P	-
A12M-SCLCR/L 08	12	16	9	11	11.5	150	CC..0803..					
A16R-SCLCR/L 08	16	20	11	14	15	200	CC..0803..					
A16M-SCLCR/L 09	16	20	11	14.5	-	150	CC..09T3..	W60M3.5x10	-	-	T15P	-
A20Q-SCLCR/L 09	20	25	13	18	-	180	CC..09T3..					
A25R-SCLCR/L 09	25	32	17	23	23	200	CC..09T3..					
A32S-SCLCR/L 12	32	40	22	30	30	250	CC..1204..	W60M4x11X	C12BS	WH40L		SM6x10XA

Державки для внутреннего точения

SCLCR/L

SDZCR/L
Kr:93°

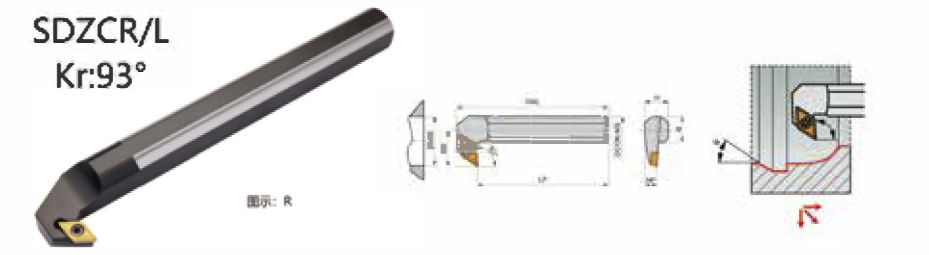

型号	DCON	DMIN	WF	H	B	LF	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
S16M-SDZCR/L 07	16	27	17	14.5	15	150	DC..0702..	W60M2.5x6.5	-	-	T07P	-
S20Q-SDZCR/L 11	20	35	22	18	18.5	180	DC..11T3..	W60M3.5x8				
S25R-SDZCR/L 11	25	42	27	23	23	200	DC..11T3..	W60M3.5x10				
S32S-SDZCR/L 11	32	53	35	30	30	250	DC..11T3..					
S40T-SDZCR/L 11	40	65	43	38	38	300	DC..11T3..					



Державки для внутреннего точения

SVUCR/L

SVUB(C)R/L
Kr:93°



图示: R

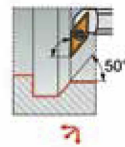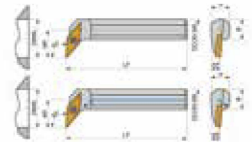

型号	DCON	DMIN	WF	H	B	LF	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
A20S-SVUCR/L 11	20	25	13	18.5	-	100	DC..0702..					
A25T-SVUCR/L 11	25	32	17	23	-	125	DC..0702..	W60M3.5×10	-	-	T07P	-
A32T-SVUCR/L 11	32	40	22	30	-	150	DC..0702..					
S25T-SVUCR/L 16	25	32	17	23	-	180	DC..11T3..					
S32U-SVUCR/L 16	32	40	22	30	23	200	DC..11T3..	W60M3.5×12	V16BSC	WH35L	T15P	SM5×8.65XA
S40V-SVUCR/L 16	40	50	27	38	30	250	DC..11T3..					



Державки для внутреннего точения

SVUCR/L

SWLCR/L
Kr:95°



图示: R

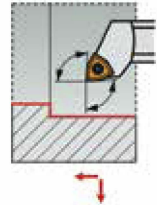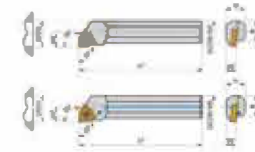

型号	DCON	DMIN	WF	H	B	LF	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
A20Q-SWLCR/L 06	20	25	13	18	18.5	180						
S20S-SWLCR/L 06	20	25	13	18	18.5	250	WC..06T3..	W60M3×7	-	-	T10P	-
A25R-SWLCR/L 06	25	32	17	23	23	200						
S25T-SWLCR/L 06	25	32	17	23	23	300						
A25R-SWLCR/L 08	25	32	17	23	23	200						
A32S-SWLCR/L 08	32	40	22	30	30	250	WC..0804..	W60M3.5×12	-	-	T15P	-
A32U-SWLCR/L 08	32	40	22	30	30	350						



Державки для внутреннего точения

SVUBR/L

SVUB(C)R/L
Kr:93°



图示: R

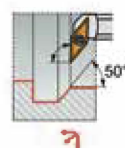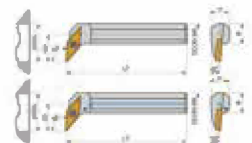

型号	DCON	DMIN	WF	H	B	LF	Cutter	Screw	Cutter pad	Wrench1	Wrench2	Cutter pad screws
A16R-SVUBR/L 11	16	20	11	14.5	15	200	VB..1103..					
A20S-SVUBR/L 11	20	25	13	18	18.5	250	VB..1103..	SM5×8.65XA	-	-	T07P	-
S25T-SVUBR/L 16	25	32	17	23	23	300	VB..1604..					
S32U-SVUBR/L 16	32	40	22	30	30	350	VB..1604..	W60M3.5×12	V16BSC	WH35L	T15P	SM5×8.65XA
S40V-SVUBR/L 16	40	50	27	38	38	400	VB..1604..					